
TOP AND CABINET PARTS

Automatic Washer



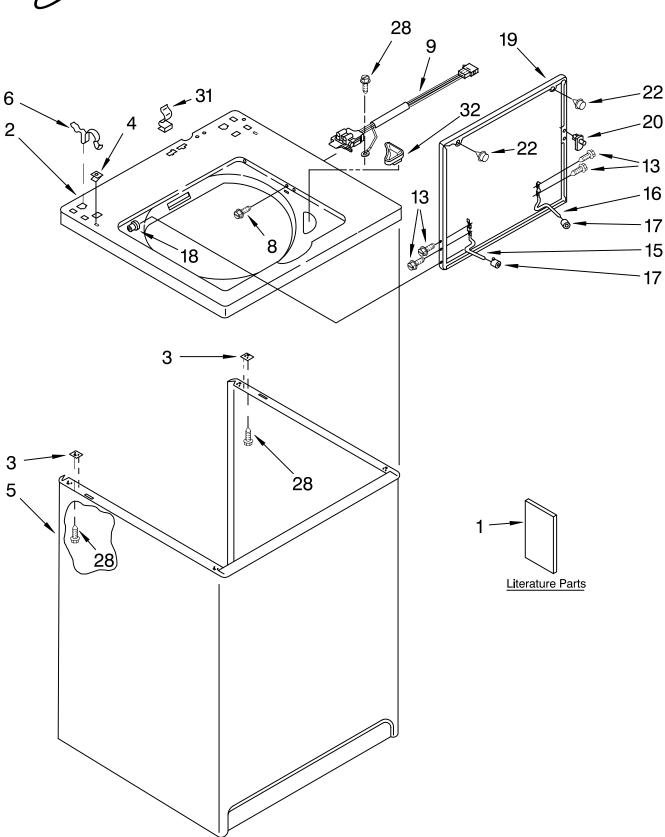


TOP AND CABINET PARTS

Illus. No.	Part No.	DESCRIPTION
1	LIT3952817 LIT3951578 LIT3953955 LIT3951073 LIT3954522 LIT3954389	French Use & Care Guide English French Energy Guide
		Be Purchased
	D-IT-YOU EPAIR MA	
	LIT4313896	Manual, Washer
2	8271378	
3	8271380 62750	
4 5	357213	Nut, Push-In (2) Cabinet
•	63424 3954357	Biscuit
6 8	62780 3356311	Clip, Top & Cabinet & Rear Panel (2) Screw & Washer,
9	3949237	Lid Switch (2)
13	3351355	Screw, Lid Hinge Mounting (4)
15 16	54584 54583	Hinge, Lid (L.H.) Hinge, Lid (R.H.)
17 18	19119 21258	Bumper, Lid Hinge Bearing, Lid
19	3361411	Hinge (2) Lid White
20 22 28	3954457 358684 9724509 3390631	Biscuit Strike, Lid Switch
31 32	90016 3362952	Clip, Harness Dispenser, Bleach

CONTROLS AND REAR PANEL PARTS


For Models: LXR9445JQ0, LXR9445JT0 (Designer White) (Biscuit)

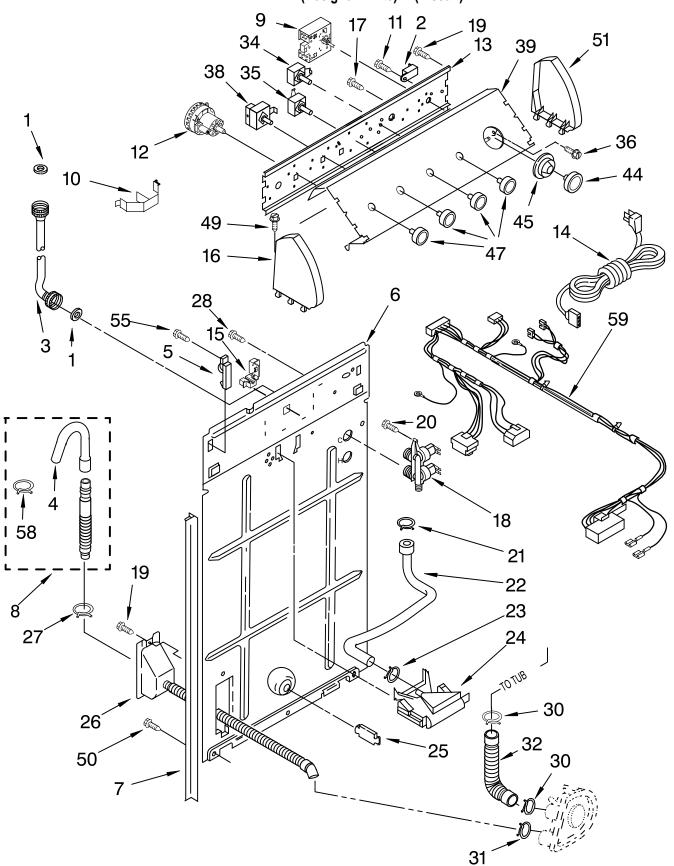

CONTROL AND REAR PANEL PARTS

				_`.`	, , ,			
Illus.	Part	D=00DID=10V	Illus.	Part	D=00DID=1011	Illus.	Part	D=00DID=1011
No.	No.	DESCRIPTION	No.	No.	DESCRIPTION	No.	No.	DESCRIPTION
1	3976300	Washer, Water	11	90767	Screw 8A x 3/8	38	661614	Switch, Water
•	0010000	Inlet Hose (4)	12		Switch, Water Level			Temperature
		(1–1/16 x 5/8)	13		Bracket, Control	39		Panel, Console
2	694419	Mini-Buzzer	14		Cord, Power		3954216	
2 3	004410	Hose, Water	15		Strain Relief,		3954217	
J		Inlet (2)			Power Cord	44	000 1211	Knob, Timer
	3949374	Blue Coupler	16		Cap, End (L.H.)	''	8271345	
		Red Coupler		8271365			8271347	
4		Nozzle-Drain		8271368		45	027 1017	Dial, Timer
7	3337027	Hose	17	3400073		'0	8271351	
5	387402	Hinge, Console (2)	18		Valve, Water		8271370	
6		Panel, Rear		0002.0.	Mixing	47	027 1070	Knob, Control
7		Pad, Rear Panel	19	90864	Screw,	''	8271339	
8		Hose, Drain	'		10-24 x 3/8 (2)		8271348	
U	3331003	(4 ft.)	20	9740848	Screw, 8/18 x 1/2	49		Screw, 8–18 x 1.25
	661577		21		Clamp, Hose	'0	000020	(Panel to Top)
	001377	(9 ft.)	22		Hose, Vacuum	50	62863	Screw, 10–16 x 3/8
		(Not Included)		0007020	Break	51	02000	Cap, End (R.H.)
	3357090	Extension	23	371503	Clamp, Hose	"	8271359	
	3337030	Drain Hose	24		Break, Vacuum		8271362	
		(21 Inches.)	25		Support, Rear	55		Screw, 8–18 x 1/2
		(Not Included.)		00200	Panel	58		Clamp, Drain
9	3954388		26	3361805	Hose-Corrugated	"	0000010	Hose
3	3334300	(60 Hz.)	-	000.000	Assembly	59	3954716	
		(Motor Not A	27	3366912	Clamp, Hose		0001710	(For Detail See
		Service Part)	28		Screw, 10–24 x 3/8			Page 9 & 10)
10	8055003	Clip, Harness	30		Clamp, Hose			rage sa roj
10	0000000	& Pressure Hose	31		Clamp, Hose			
		a i ressure riose	32		Hose, Pump To Tub			
			34	3949187	Switch, Rotary			
			35		Switch, Rotary			
			36		Screw, Timer			
			"	2.00000	Mounting			

AGITATOR, BASKET AND TUB PARTS

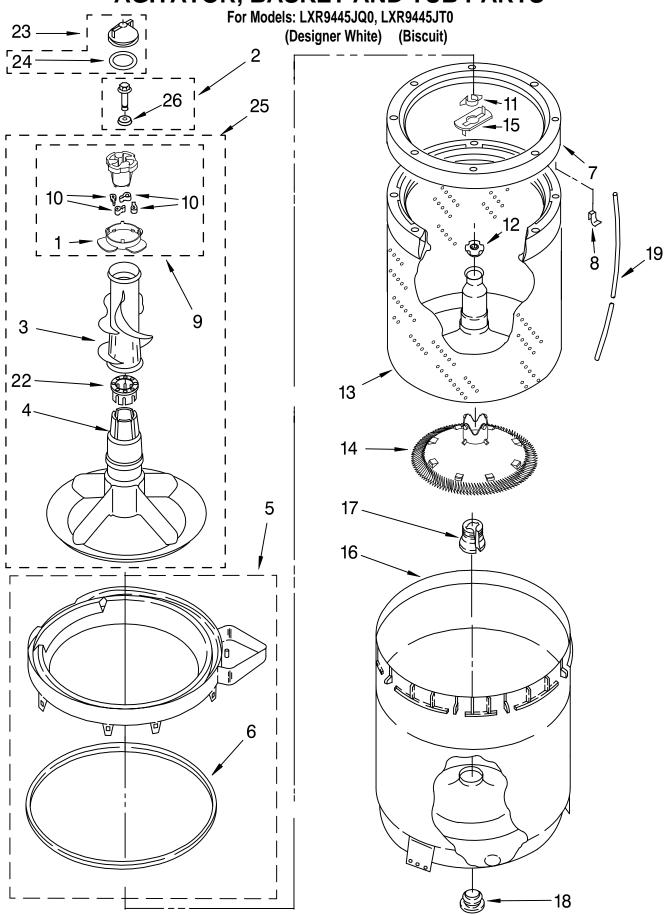

AGITATOR, BASKET AND TUB PARTS For Models: LXR9445JQ0, LXR9445JT0

(Designer White) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
1	3363661	Bearing-Driven Cam
2	358237	Screw & Washer (5/16–24 x 1)
3	3349019	Clothes Mover
4	3350830	
5	3360611	Tub Ring & Gasket
6	3359586	Gasket, Tub Ring
7	387868	Balance Ring
8	387867	Clip, Balance Ring (8)
9	3363663	
10	3366877	Dog, Agitator Clutch
11	3354845	Clip-Agitator
12	21366	
13	8271644	Basket
		(Also Order #14)
14	3952746	
15	3355921	Washer-Agitator
16	63125	Tub
17	389140	Block, Basket Drive
18	383727	Gasket, Centerpost
19	3347780	
22	3350389	Spacer, Thrust
23	3354733	Cap, Barrier
24	3348855	
25	3350829	Agitator Assy
26	3949550	Washer


BRAKE, CLUTCH, GEARCASE, MOTOR AND PUMP PARTS For Models: LXR9445JQ0, LXR9445JT0

(Designer White) (Biscuit)

(Designer White) (Biscuit)						
	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
	1	388951	Brake & Drive Tube (Complete)	11	62611	Plate, Motor Mount To Gearcase
1——	2	63202	(Refer to Page 11 For Further Breakdown) Washer, Spin	12 13	62691 3364003	Grommet, Motor (4) Coupling, Motor & Isolation
2	3		Tube Thrust Ring, Spin	15	3355454	Clip, Anti–Rattle
3			Tube Support	16	3400516	Screw
	4 5	63283	Ring, Retainer Clutch (Complete)	17 18		Retainer, Motor (2) Shield, Tub
5	6		Band & Lining, Clutch (Includes	19		To Motor Motor, Main
7 - 7 - 7	7	62646	Illus. 7 & 8) Cap, Clutch Spring (2)	20	62850	Drive Switch, Main Drive Motor
	8	3946792	Spring, Clutch	21		Retainer, Pump (2)
	9	3360630	Gearcase	22 23	3363394	Pump (Complete) Screw, 10–16 x 5/8
16			(Complete) (Refer To Page 12	24	3946532	Shield, Motor
15 !			For Further Breakdown)	25	62863	Screw, 10–16 x 3/8
	10	3357334	Screw, Gearcase	26		Capacitor
			To Base (3)	27	357030	Clamp, Capacitor
9	16		25 26		18 23	3
			27		17 20 \ \	,
11/ 12 13						
24						21
				*	7	22 21
			19	\f	()	
			17 ⁻ 23			**

MACHINE BASE PARTS


For Models: LXR9445JQ0, LXR9445JT0 (Designer White) (Biscuit)

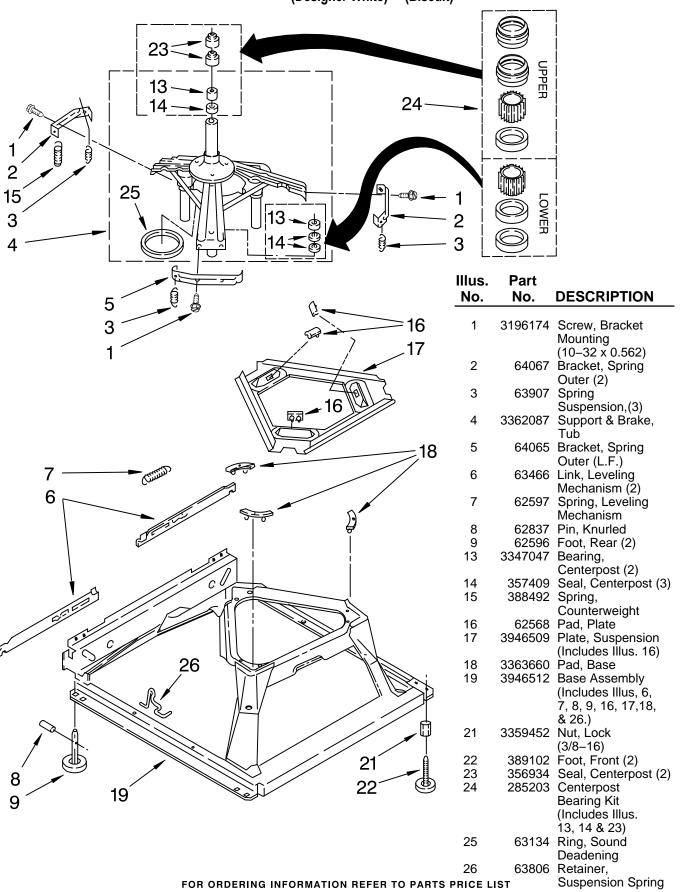

8

WIRING HARNESS PARTS

For Models: LXR9445JQ0, LXR9445JT0 (Designer White) (Biscuit)

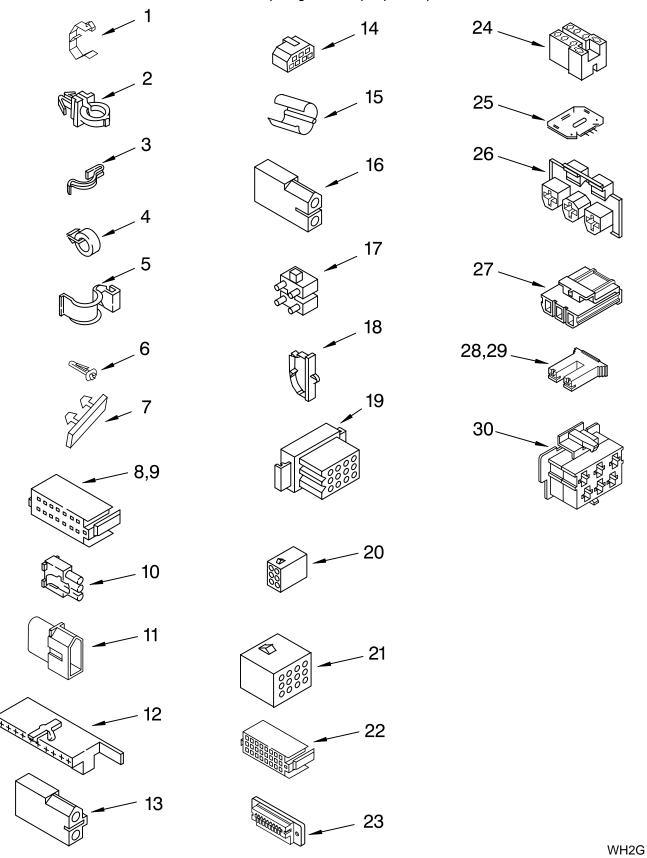

WIRING HARNESS PARTS


For Models: LXR9445JQ0, LXR9445JT0 (Designer White) (Biscuit)

IIIus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
<u> 140.</u>	NO.	DESCRIPTION	- 140. -	NO.	DESCRIPTION	140.	NO.	DESCRIPTION
1 2		Clip, Harness	13	3348075	Block, Disconnect (Motor 3 Speed)	23 24		Connector, Etc Connector, Relay
3		Clip, Harness			(Use Term. 94613 Or 94614.)	0.5	0.407405	(Use Term.308569)
4 5		Clip, Harness Clip, Harness	14	3347243		25 26		E.T.C. Control Connector (T.P.A.)
6	3390496	Clip, Harness	'	3377273	(Use Term. 352088)	20	3940017	(3–Circuit)
7		Retainer,	15	63523	Protector			(Lid Switch)
•	0000.0	(Suds Models)	16		Connector			(Use Term. 3948619
8	352090	Timer, Block			(2-Way)			OR 3948620.)
		Disconnect (White)	17	387566	(Use Term.94614) Plug, Terminal	27	3360056	Connector (T.P.A) (3–Circuit)
9	352089	Timer, Block			(4–Way)			(Pressure Switch)
		Disconnect			(Power Cord) (Use M3 Screws)			(Use Term.3948619
10	62889	(Black) Receptacle, Terminal	18 19		Clip, Harness Block, Disconnect	28	3354925	OR 3948620.) Block, Connector (Cold Valve)
		(3-Way) (Lid Switch) (Use Term.94613)			(12–Way) (Timer) (Use Term. 94613)	29	3354926	(Use Term.693217) Block, Connector (Hot Valve)
		Or 94614.)	20	3347730	Receptacle			(Use Term.693217)
11	353424	Plug, Terminal (3–Way)			(6-Way) (Use Term. 94613)	30	3948615	
		(Power Cord)	21	388818	O ,			(Temp. Switch)
		(Use Term.94613)			(12–Way)			(Use Term.3948619
12	62505				(Use Term. 94613			OR 3948620.)
		(Motor 2 Speed) (Use Term.352088)	22	3369366	Or 94614.) Timer, Block			
		(USE TEIIII.352000)	~~	3309300	Disconnect			
					(Black) (Amp)			
					(Use Term.3369365)			
					`			
			'		'	,		

FOR COMPLETE WIRING HARNESS REFER TO CONTROL AND REAR PANEL PARTS PAGE

BRAKE AND DRIVE TUBE PARTS

For Models: LXR9445JQ0, LXR9445JT0 (Designer White) (Biscuit)

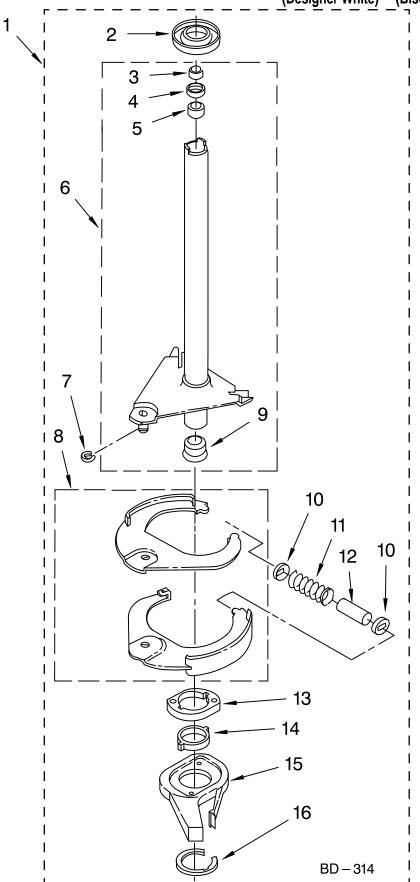


Illus. No.	Part No.	DESCRIPTION
110.	110.	DECORII HOR
1	388951	Brake And Drive Tube (Complete)
2	62658	Ring, Thrust
2 3	91939	Seal, Oil
4	356427	Seal, Drive Tube
5	356937	Spacer, Drive Tube
6	64027	Tube, Basket
		Drive (Includes
		Illus. 3, 4, 5 & 9)
7	64035	Ring, Retaining
8	64232	Brake Shoe
9	62703	"T" Bearing,
		Spin Tube
10	62648	Cap, Brake
		Spring (2)
11	62647	Spring, Brake
12	62909	Sleeve, Brake
		Spring
13	63023	Cam, Brake
		Release
14	63022	Sleeve, Cam
15	64194	Driver, Brake
		Cam
16	90368	Ring, Retaining

FOLLOWING PARTS NOT ILLUSTRATED


285208 Lubricant (Use Only In Brake Shoe Assembly On Roller & Pin)

GEARCASE PARTS

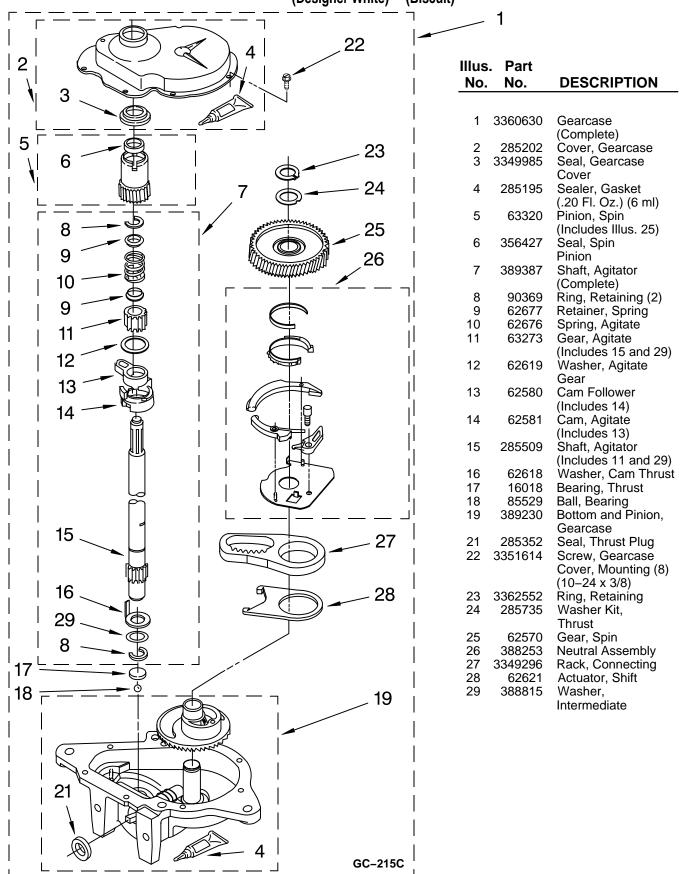

WATER SYSTEM PARTS

For Models: LXR9445JQ0, LXR9445JT0 (Designer White) (Biscuit)

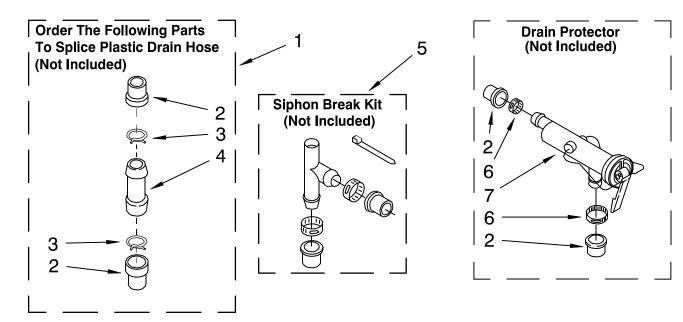


WS400

Illus. No.	Part No.	DESCRIPTION
1	285442	Connector Kit, Plastic Drain Hose
2	285321	Sleeve Kit, (Contains 2 Sleeves)
3	370447	Clamp, Hose
4	16272	Connector, Straight
5	285320	Siphon Break Kit (Not Included)
6 7	65349 367031	Clamp, Hose Drain Protector (Not Included)

MISCELLANEOUS PARTS

For Models: LXR9445JQ0, LXR9445JT0 (Designer White) (Biscuit)

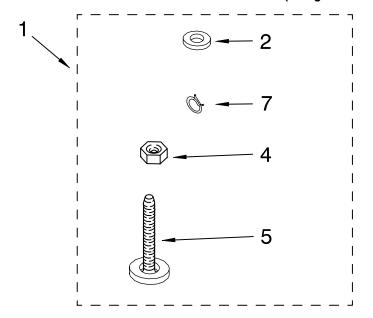

Illus. No.	Part No.	DESCRIPTION
1	3976263	Miscellaneous Parts Bag
2	3976300	Washer, Inlet Hose
4	3359452	(1–1/16 x 5/8) (4) Nut, Lock (3/8–16)
5	389102	Foot, Front (2)
7		Clamp, Hose

OPTIONAL PARTS (NOT INCLUDED)

Illus. Part

No. No. DESCRIPTION

PAINT, TOUCH-UP (1/2oz.)

72017 White 4392899 Biscuit

PAINT, PRESSURIZED SPRAY

(12 oz.)

350938 Primer, Gray 350930 White 4392901 Biscuit

PAINT, BULK (1 qt.)

799344 White (Uncut) 4392900 Biscuit (Uncut)

OIL

350572 Oil, Gearcase (16 Oz.)

Illus. Part

No. No. DESCRIPTION

LUBRICANT

285208 Lubricant (Use Only in Brake Shoe Assembly On Roller and Pin)

SEALER

285195 Sealer, Gasket (.20 Fl. Oz.) (6 ml)

SHIPPING KIT

3348675 Shipping Kit

ACCESSORY PARTS

63580 Fabric Dispenser 367031 Drain Protector 285320 Siphon Break Kit

14 8179503